

## SpaceLift 5000 Trim and Ceiling Cover


### INCLUDED WITH THE SPACELIFT 5000 CARGO LIFT:

- Spring set, coupling nuts, lock nuts, rubber feet and eye hook set (4 each)
- Landing pads (for bottom of ceiling cover)

### INSTALLER TO PROVIDE CEILING COVER AND TRIM MOLDING:

- Wood trim molding (4 pieces) – 1 x 1-1/2-inches, total of 14 linear feet required. Cut to dimensions indicated on diagram with 27 degree beveled edges.
- Ceiling cover – select material consistent with local building codes (or 1/2-inch birch plywood) cut to 45-3/8 x 22-3/8 inches with 27 degree beveled edges.
- L-brace – 1 x 1 x 32 inch aluminum brace fastened to top of ceiling cover for structural support.

Installation instructions on the following page.

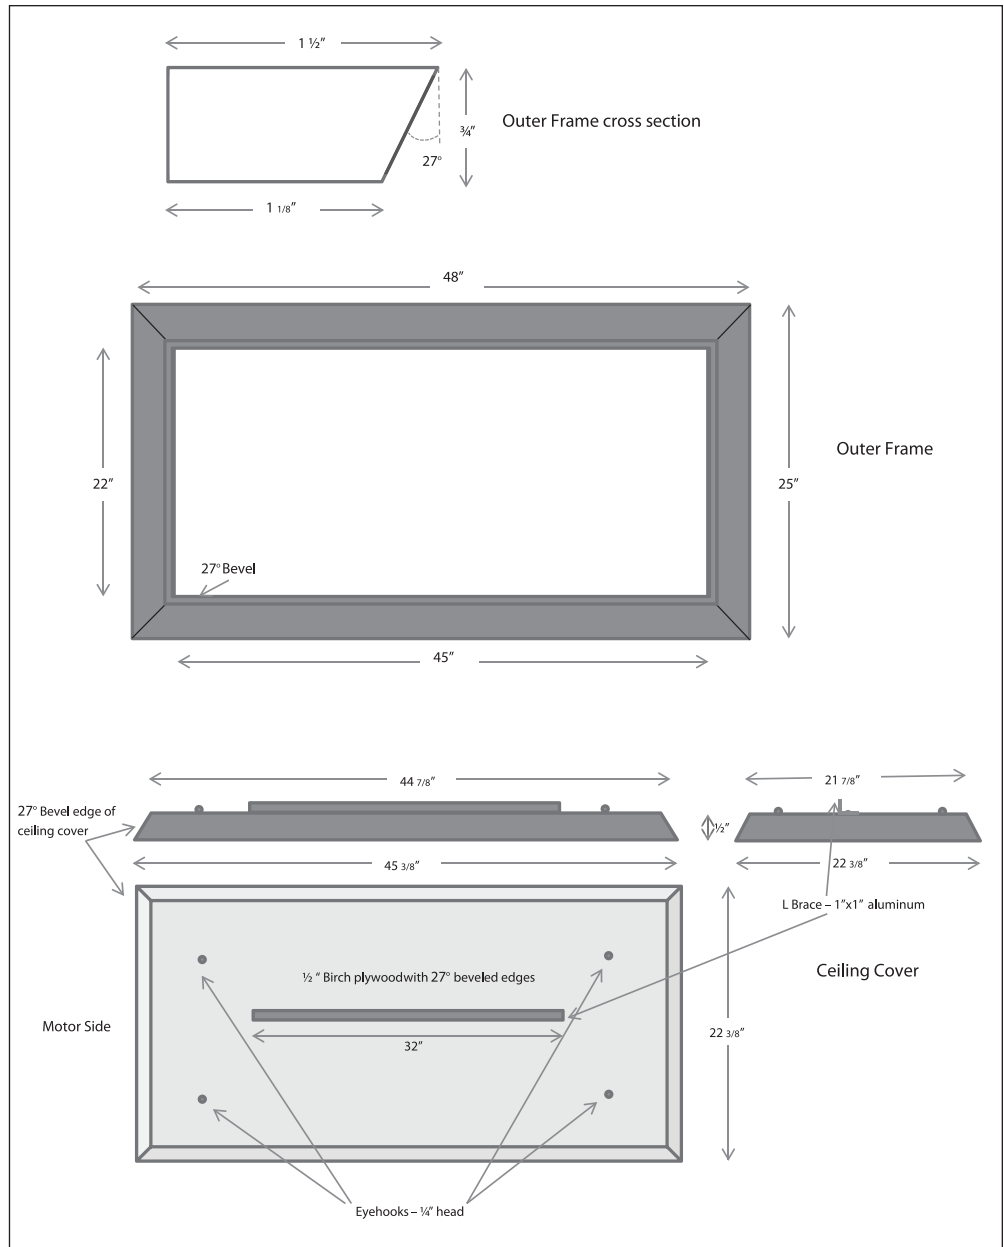

Wood trim and ceiling cover

## Install Trim and Molding

1. Cut ceiling cover and trim molding to dimensions shown. Install weather strip/seal (optional).
2. With 1-1/2 to 2-inch long nails or wood screws install beveled wood finish molding frame to ceiling as shown. Note: the innermost portion of the frame is to have a uniform, 1/4 to 1/2-inch perimeter around the edge of the opening.

## Install Ceiling Cover

1. Consult SpaceLift 5000 operating instructions and lower the lift tray 3 to 5 feet above floor level and stop.
2. Attach 1/4-inch lock nut and coupling nut (included with 5000) to four corner positions under lift tray as shown (Photo 1). Adjust length so distance between the bottom of the tray and the bottom of the rubber feet is 2-3/4-inches. Use 1/4-inch locking nut to lock in this position. Note: Non-standard mounting circumstances may require adjusting to different length. (Please refer to 5000 FAQ before installation in a non-standard configuration).
3. For installation, rest the ceiling cover on a box or other level surface directly below the lift tray. Set four eyehooks (supplied with 5000 unit) into top of ceiling cover as shown in diagram.
4. Using operating instructions, lower lift tray so the four rubber feet are approximately 1/2-inch above the ceiling cover and stop.
5. Attach the springs (supplied with 5000 unit) on bottom of tray brackets to eyehooks as shown (Photo 2). Photo 3 shows the installed ceiling cover before finishing or painting.
6. Affix four landing pads (supplied with 5000 unit) to bottom of ceiling cover.

For more information, check the SpaceLift 5000 Product page and FAQ on our website.

# SpaceLift<sup>®</sup>

RAISING STORAGE TO A HIGHER LEVEL

Visit [SpaceLiftProducts.com](http://SpaceLiftProducts.com)

© 2011 SpaceLift Products, Inc. All rights reserved. (2/12)

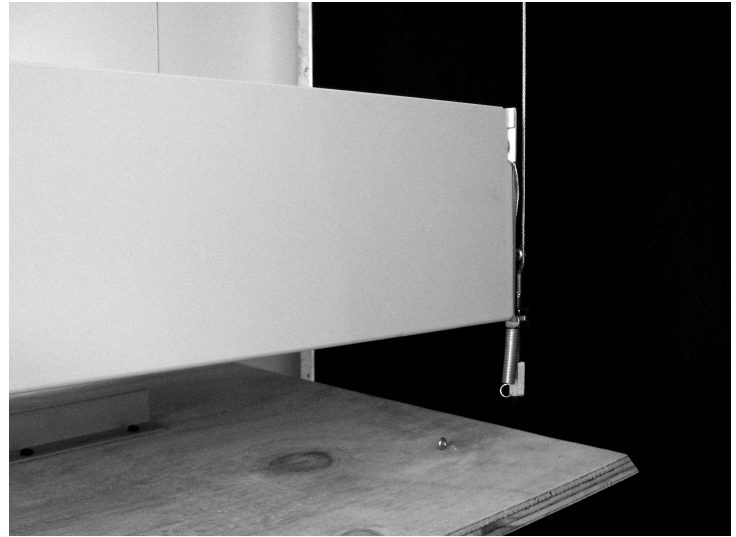


Photo 1: lowered platform tray with ceiling cover positioned below

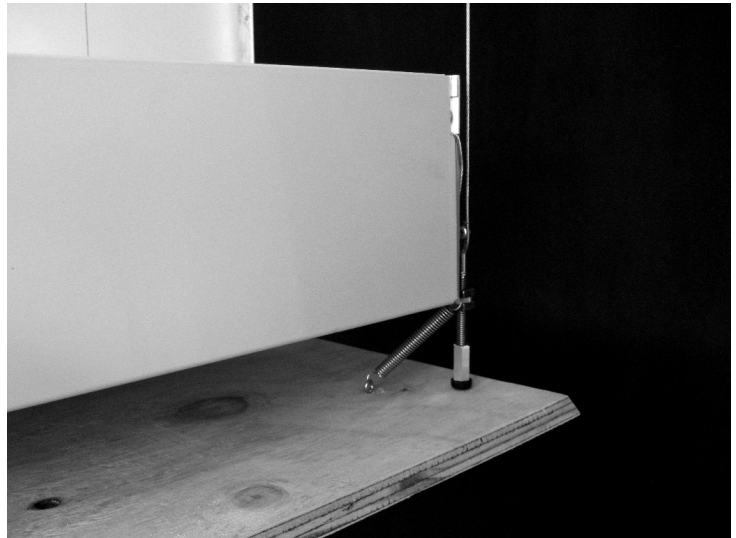


Photo 2: lowered platform tray with springs attached to eye hooks

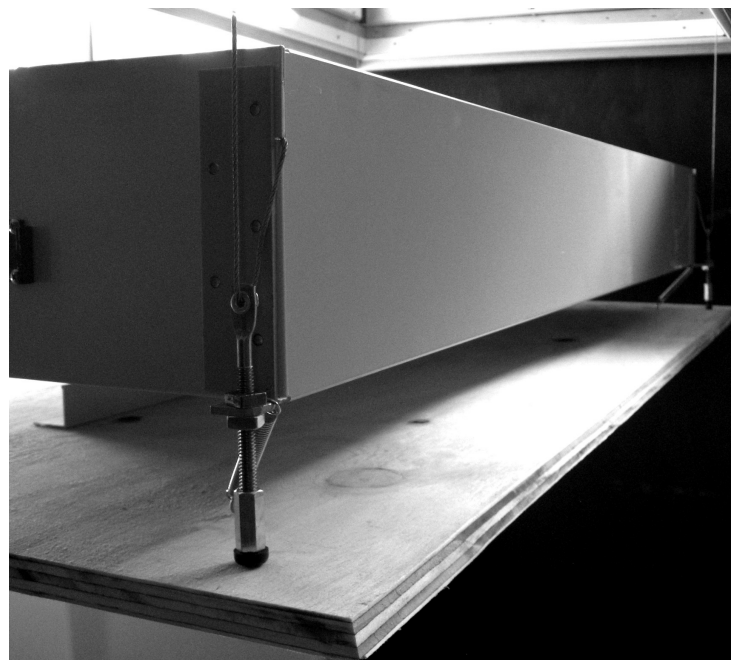


Photo 3: perspective of tray length with ceiling cover attached